

DESCRIPTION	SPECIFICATION
REAR AXLE	
8 1/4 in.	2.07L (70 oz.)
9 1/4 in.	2.13L (72 oz.)
*** Includes 0.9L (1.0 qts.) for coolant reservoir.	
****Nominal refill capacities are shown. A variation may be observed from vehicle to vehicle due to manufacturing tolerance and refill procedure.	
Power Steering	
Power steering fluid capacities are dependent on engine/chassis options as well as steering gear/cooler options. Depending on type and size of internal cooler, length and inside diameter of cooler lines, or use of an auxiliary cooler, these capacities may vary.	

## FLUID FILL/CHECK LOCATIONS

### DESCRIPTION

The fluid check/fill points and lubrication locations are located in each applicable Sections.

## MAINTENANCE SCHEDULES

### DESCRIPTION

#### DOMESTIC SCHEDULES

Maintenance Schedule Information not included in this section, is located in the appropriate Owner's Manual.

There are two maintenance schedules that show the **required** service for your vehicle.

First is Schedule "B". It is for vehicles that are operated under the conditions that are listed below and at the beginning of the schedule.

- Day or night temperatures are below 32° F (0° C).
- Stop and go driving.
- Extensive engine idling.
- Driving in dusty conditions.
- Short trips of less than 10 miles (16 km).
- More than 50% of your driving is at sustained high speeds during hot weather, above 90° F (32° C).
- Trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.
- **If equipped for and operating with E-85 (ethanol) fuel.**

**Note: If ANY of these apply to you then change your engine oil every 3,000 miles (5 000 km) or 3 months, whichever comes first and follow schedule "B" of the "Maintenance Schedules" section of this manual.**

**Note: Most vehicles are operated under the conditions listed for Schedule "B".**

Second is Schedule "A". It is for vehicles that are not operated under any of the conditions listed under Schedule "B".

Use the schedule that best describes your driving conditions. Where time and mileage are listed, follow the interval that occurs first.

**Note:** Under no circumstances should oil change intervals exceed 6000 miles (10 000 km) or 6 months whichever comes first.

**CAUTION:** Failure to perform the required maintenance items may result in damage to the vehicle.

#### ***At Each Stop for Fuel***

- Check the engine oil level about 5 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

#### ***Once a Month***

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of coolant reservoir, brake master cylinder, and transmission and add as needed.
- Check all lights and all other electrical items for correct operation.

#### ***At Each Oil Change***

- Change the engine oil filter.
- Inspect the exhaust system.
- Inspect the brake hoses.
- Inspect the CV joints (if equipped) and front suspension components.
- Check the automatic transmission fluid level.
- Check the coolant level, hoses, and clamps.

#### ***Tire Rotation***

- Rotate the tires at 6,000 miles (10 000 km).

#### **Schedule “B”**

Follow schedule “B” if you usually operate your vehicle under one or more of the following conditions.

- Day or night temperatures are below 32° F (0° C).
- Stop and go driving.
- Extensive engine idling.
- Driving in dusty conditions.
- Short trips of less than 10 miles (16 km).
- More than 50% of your driving is at sustained high speeds during hot weather, above 90° F (32° C).
- Trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.
- **If equipped for and operating with E-85 (ethanol) fuel.**

**Note:** If ANY of these apply to you then change your engine oil every 3,000 miles (5 000 km) or 3 months, whichever comes first and follow schedule “B” of the “Maintenance Schedules” section of this manual.

<b>Miles (Kilometers)</b>	<b>3,000 (5 000)</b>	<b>6,000 (10 000)</b>	<b>9,000 (14 000)</b>	<b>12,000 (19 000)</b>	<b>15,000 (24 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X

<b>Miles (Kilometers)</b>	<b>18,000 (29 000)</b>	<b>21,000 (34 000)</b>	<b>24,000 (38 000)</b>	<b>27,000 (43 000)</b>	<b>30,000 (48 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Check transfer case fluid level (4X4).					X
Inspect brake linings.	X				
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
<b>Replace spark plugs.</b>					X
<b>Inspect PCV valve, replace as necessary.*</b>					X
Drain and refill automatic transmission fluid and change main sump filter (4.7L/5.7L only).					X

<b>Miles (Kilometers)</b>	<b>33,000 (53 000)</b>	<b>36,000 (58 000)</b>	<b>39,000 (62 000)</b>	<b>42,000 (67 000)</b>	<b>45,000 (72 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.		X			
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X

<b>Miles (Kilometers)</b>	<b>48,000 (77 000)</b>	<b>51,000 (82 000)</b>	<b>54,000 (86 000)</b>	<b>57,000 (91 000)</b>	<b>60,000 (96 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.			X		
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
<b>Replace spark plugs.</b>					X
<b>Inspect PCV valve, replace as necessary.*</b>					X
<b>Inspect and replace ignition cables if necessary (5.7L only).</b>					X

<b>Miles (Kilometers)</b>	<b>48,000 (77 000)</b>	<b>51,000 (82 000)</b>	<b>54,000 (86 000)</b>	<b>57,000 (91 000)</b>	<b>60,000 (96 000)</b>
Inspect auto tension drive belt and replace if required.					X
Drain and refill automatic transmission fluid, change filter (3.7L).					X
Drain and refill automatic transmission fluid and change main sump filter (4.7L/5.7L only).					X
Inspect transfer case fluid (4X4).					X

<b>Miles (Kilometers)</b>	<b>63,000 (101 000)</b>	<b>66,000 (106 000)</b>	<b>69,000 (110 000)</b>	<b>72,000 (115 000)</b>	<b>75,000 (120 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.				X	
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
Inspect auto tension drive belt and replace if required.					X

<b>Miles (Kilometers )</b>	<b>78,000 (125 000)</b>	<b>81,000 (130 000)</b>	<b>84,000 (134 000)</b>	<b>87,000 (139 000)</b>	<b>90,000 (144 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Check transfer case fluid level (4X4).					X
Inspect brake linings.					X
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
<b>Replace spark plugs.</b>					X
<b>Inspect PCV valve, replace as necessary.*</b>					X
Inspect auto tension drive belt and replace if required.					X
Drain and refill automatic transmission fluid, change filter (3.7L).					X
Drain and refill automatic transmission fluid and change main sump and cooler return filter (if equipped) (4.7L/5.7L only).					X

<b>Miles (Kilometers)</b>	<b>93,000 (149 000)</b>	<b>96,000 (154 000)</b>	<b>99,000 (158 000)</b>	<b>100,000 (160 000)</b>	<b>102,000 (163 000)</b>
Change engine oil and engine oil filter.	X	X	X		X
Flush and replace engine coolant.					X
Change rear axle fluid.		X			
Change front axle fluid (4X4).		X			

<b>Miles (Kilometers)</b>	<b>105,000 (168 000)</b>	<b>108,000 (173 000)</b>	<b>111,000 (178 000)</b>	<b>114,000 (182 000)</b>	<b>117,000 (187 000)</b>	<b>120,000 (192 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X	X
Change rear axle fluid.	X					X
Change front axle fluid (4X4).	X					X
Inspect brake linings.		X				
<b>Inspect engine air cleaner filter, replace if necessary.</b>	X					X
<b>Replace spark plugs.</b>						X
<b>Inspect and replace ignition cables if necessary (5.7L only).</b>						X
<b>Inspect PCV valve, replace as necessary.*</b>						X
Inspect auto tension drive belt and replace if required.‡	X					X
Drain and refill transfer case fluid (4X4).						X
Drain and refill automatic transmission fluid, change filter (3.7L).						X
Drain and refill automatic transmission fluid and change main sump filter (4.7L/5.7L only).						X

\* This maintenance is recommended by the manufacture to the owner but is not required to maintain the emissions warranty.

‡ This maintenance is not required if previously replaced.

Inspection and service should also be performed anytime a malfunction is observed or suspected.

**Schedule “A”**

<b>Miles (Kilometers) [Months]</b>	<b>6,000 (10 000) [6]</b>	<b>12,000 (19 000) [12]</b>	<b>18,000 (29 000) [18]</b>	<b>24,000 (38 000) [24]</b>	<b>30,000 (48 000) [30]</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Check transfer case fluid level (4X4).					X
Inspect brake linings.			X		
<b>Replace engine air cleaner filter.</b>					X
<b>Replace spark plugs.</b>					X

<b>Miles (Kilometers) [Months]</b>	<b>36,000 (58 000) [36]</b>	<b>42,000 (67 000) [42]</b>	<b>48,000 (77 000) [48]</b>	<b>54,000 (84 000) [54]</b>	<b>60,000 (96 000) [60]</b>	<b>66,000 (106 000) [66]</b>
Change engine oil and engine oil filter.	X	X	X	X	X	X
Check transfer case fluid level (4X4).					X	
Flush and replace engine coolant at 60 months, regardless of mileage.					X	
Inspect brake linings.	X			X		
<b>Replace engine air cleaner filter.</b>					X	
<b>Replace spark plugs.</b>					X	
<b>Inspect PCV valve, replace as necessary. *</b>					X	
<b>Inspect and replace ignition cables if necessary (5.7L only).</b>					X	
Inspect auto tension drive belt and replace if required.					X	

<b>Miles (Kilometers) [Months]</b>	<b>72,000 (115 000) [72]</b>	<b>78,000 (125 000) [78]</b>	<b>84,000 (134 000) [84]</b>	<b>90,000 (144 000) [90]</b>	<b>96,000 (154 000) [96]</b>	<b>100,000 (160 000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X	
Check transfer case fluid level (4X4).				X		
Inspect brake linings.	X			X		
<b>Replace engine air cleaner filter.</b>				X		
<b>Replace spark plugs.</b>				X		
<b>Inspect PCV valve, replace as necessary.*</b>				X		

Miles (Kilometers) [Months]	72,000 (115 000) [72]	78,000 (125 000) [78]	84,000 (134 000) [84]	90,000 (144 000) [90]	96,000 (154 000) [96]	100,000 (160 000)
Inspect auto tension drive belt and replace if required.‡				X		
Drain and refill automatic transmission fluid, change filter (3.7L).						X
Drain and refill automatic transmission fluid and change sump and cooler return filter (if equipped) (4.7L/5.7L only).						X

Miles (Kilometers) [Months]	102,000 (163 000) [102]	108,000 (173 000) [108]	114,000 (182 000) [114]	120,000 (192 000) [120]
Change engine oil and engine oil filter.	X	X	X	X
Drain and refill transfer case fluid (4X4).				X
Flush and replace engine coolant, if not done at 60 mos.	X			
Flush and replace engine coolant, if not done at 102,000 miles (163 000 km)				X
Inspect brake linings.		X		
<b>Replace engine air cleaner filter.</b>				X
<b>Replace spark plugs.</b>				X
<b>Inspect PCV valve, replace as necessary.*</b>				X

\* This maintenance is recommended by the manufacture to the owner but is not required to maintain the emissions warranty.

‡ This maintenance is not required if previously performed.

Inspection and service should also be performed anytime a malfunction is observed or suspected.

**WARNING: You can be badly injured working on or around a motor vehicle. Do only that service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.**

## EXPORT SCHEDULES

Maintenance Schedule Information not included in this section, is located in the appropriate Owner's Manual.

There are two maintenance schedules that show the **required** service for your vehicle.

First is Schedule "A". It lists all the scheduled maintenance to be performed under "normal" (if none of the conditions in Schedule "B" apply to you) operating conditions.

Second is Schedule "B." It is a schedule for vehicles that are operated under the conditions listed below.

Follow Schedule "B" if you usually operated your vehicle under one or more of the following conditions.

- Day or night temperatures are below 0° C (32° F).
- Stop and go driving.
- Extensive engine idling.
- Driving in dusty conditions.
- Short trips of less than 16 km (10 miles).
- More than 50% of your driving is at sustained high speeds during hot weather, above 32° C (90° F).

- Trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.
- **If equipped for and operating with E-85 (ethanol) fuel.**

**Note: If ANY of these apply to you then change your engine oil every 5 000 km (3,000 miles) or 3 months, whichever comes first and follow schedule “B” of the “Maintenance Schedules” section of this manual.**

**Note: Most vehicles are operated under the conditions listed for Schedule “B”.**

Use the schedule that best describes your driving conditions. Where time and mileage are listed, follow the interval that occurs first.

**CAUTION: Failure to perform the required maintenance items may result in damage to the vehicle.**

***At Each Stop for Fuel***

- Check the engine oil level about 5 minutes after a fully warmed engine is shut off. Checking the oil level while the vehicle is on level ground will improve the accuracy of the oil level reading. Add oil only when the level is at or below the ADD or MIN mark.
- Check the windshield washer solvent and add if required.

***Once a Month***

- Check tire pressure and look for unusual wear or damage.
- Inspect the battery and clean and tighten the terminals as required.
- Check the fluid levels of coolant reservoir, brake master cylinder, and transmission and add as needed.
- Check all lights and all other electrical items for correct operation.

***At Each Oil Change***

- Change the engine oil filter.
- Inspect the exhaust system.
- Inspect the brake hoses.
- Inspect the CV joints (if equipped) and front suspension components.
- Check the automatic transmission fluid level.
- Check the coolant level, hoses, and clamps.
- Rotate the tires at each oil change interval shown on Schedule “A” 12 000 km (7,500 miles) or every other interval shown on Schedule “B” 10 000 km (6,000 miles).

**Schedule “A”**

<b>Kilometers (Miles) [Months]</b>	<b>12 000 (7,500) [6]</b>	<b>24 000 (15,000) [12]</b>	<b>36 000 (22,500) [18]</b>	<b>48 000 (30,000) [24]</b>	<b>60 000 (37,500) [30]</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Check transfer case fluid level.				X	
Inspect brake linings.			X		
<b>Replace engine air cleaner filter.</b>				X	
<b>Replace spark plugs.</b>				X	

<b>Kilometers (Miles) [Months]</b>	<b>72 000 (45,000) [36]</b>	<b>84 000 (52,500) [42]</b>	<b>96 000 (60,000) [48]</b>	<b>108 000 (67,500) [54]</b>	<b>120 000 (75,000) [60]</b>	<b>132 000 (82,500) [66]</b>
Change engine oil and engine oil filter.	X	X	X	X	X	X
Check transfer case fluid level.			X			
Flush and replace engine coolant at 60 months, regardless of mileage.					X	
Inspect brake linings.	X			X		
<b>Replace engine air cleaner filter.</b>			X			
<b>Replace spark plugs.</b>			X			
<b>Inspect PCV valve, replace as necessary. *</b>			X			
<b>Replace ignition cables (5.7L) only.</b>			X			
Inspect auto tension drive belt and replace if required.			X			

<b>Kilometers (Miles) [Months]</b>	<b>144 000 (90,000) [72]</b>	<b>156 000 (97,500) [78]</b>	<b>160 000 (100,000)</b>	<b>168 000 (105,000) [84]</b>	<b>181 000 (112,500) [90]</b>	<b>192 000 (120,000) [96]</b>
Change engine oil and engine oil filter.	X	X		X	X	X
Flush and replace engine coolant if not done at 60 mos.			X			
Drain and refill transfer case fluid.						X
Check transfer case fluid level.	X					
Inspect brake linings.	X				X	
<b>Replace engine air cleaner filter.</b>	X					X
<b>Replace spark plugs.</b>	X					X
<b>Replace ignition cables (5.7L) only.</b>						X
<b>Inspect PCV valve, replace as necessary.*</b>	X					X
Inspect auto tension drive belt and replace if required.	X					
Drain and refill automatic transmission fluid, change filter (3.7L only).			X			

<b>Kilometers (Miles) [Months]</b>	<b>144 000 (90,000) [72]</b>	<b>156 000 (97,500) [78]</b>	<b>160 000 (100,000)</b>	<b>168 000 (105,000) [84]</b>	<b>181 000 (112,500) [90]</b>	<b>192 000 (120,000) [96]</b>
Drain and refill automatic transmission fluid and change sump and cooler return filter (if equipped) (4.7L/5.7L only).			X			

\* This maintenance is recommended by the manufacture to the owner but is not required to maintain the emissions warranty.

‡ This maintenance is not required if previously replaced.

Inspection and service should also be performed anytime a malfunction is observed or suspected.

### Schedule “B”

Follow schedule “B” if you usually operate your vehicle under one or more of the following conditions.

- Day or night temperatures are below 0° C (32° F).
- Stop and go driving.
- Extensive engine idling.
- Driving in dusty conditions.
- Short trips of less than 16 km (10 miles).
- More than 50% of your driving is at sustained high speeds during hot weather, above 32° C (90° F).
- Trailer towing.
- Taxi, police, or delivery service (commercial service).
- Off-road or desert operation.
- **If equipped for and operating with E-85 (ethanol) fuel.**

**Note: If ANY of these apply to you then change your engine oil every 5 000 km (3,000 miles) or 3 months, whichever comes first and follow schedule “B” of the “Maintenance Schedules” section of this manual.**

<b>Kilometers (Miles)</b>	<b>5 000 (3,000)</b>	<b>10 000 (6,000)</b>	<b>14 000 (9,000)</b>	<b>19 000 (12,000)</b>	<b>24 000 (15,000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.				X	
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X

<b>Kilometers (Miles)</b>	<b>29 000 (18,000)</b>	<b>34 000 (21,000)</b>	<b>38 000 (24,000)</b>	<b>43 000 (27,000)</b>	<b>48 000 (30,000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.			X		
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
<b>Replace spark plugs.</b>					X

<b>Kilometers (Miles)</b>	<b>29 000 (18,000)</b>	<b>34 000 (21,000)</b>	<b>38 000 (24,000)</b>	<b>43 000 (27,000)</b>	<b>48 000 (30,000)</b>
<b>Inspect PCV valve, replace as necessary.*</b>					X
Drain and refill automatic transmission fluid, change filter (3.7L only).					X
Drain and refill automatic transmission fluid and change main sump filter (4.7L/5.7L only).					X

<b>Kilometers (Miles)</b>	<b>53 000 (33,000)</b>	<b>58 000 (36,000)</b>	<b>62 000 (39, 000)</b>	<b>67 000 (42,000)</b>	<b>72 000 (45,000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.		X			
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X

<b>Kilometers (Miles)</b>	<b>77 000 (48,000)</b>	<b>82 000 (51,000)</b>	<b>86 000 (54,000)</b>	<b>91 000 (57,000)</b>	<b>96 000 (60,000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.	X				X
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
<b>Replace spark plugs.</b>					X
<b>Inspect and replace ignition cables, if necessary ( 5.7L) only.</b>					X
<b>Inspect PCV valve, replace as necessary.*</b>					X
Inspect auto tension drive belt and replace if required (5.9L).					X
Drain and refill automatic transmission fluid change filter (3.7L).					X
Drain and refill automatic transmission fluid and change main sump filter (4.7L/5.7L only).					X
Drain and refill transfer case fluid (4X4).					X

<b>Kilometers (Miles)</b>	<b>101 000 (63,000)</b>	<b>106 000 (66,000)</b>	<b>110 000 (69,000)</b>	<b>115 000 (72,000)</b>	<b>120 000 (75,000)</b>
Change engine oil and engine oil filter.	X	X	X	X	
Change rear axle fluid.					X
Change front axle fluid (4X4).					X

<b>Kilometers (Miles)</b>	<b>101 000 (63,000)</b>	<b>106 000 (66,000)</b>	<b>110 000 (69,000)</b>	<b>115 000 (72,000)</b>	<b>120 000 (75,000)</b>
Inspect brake linings.				X	
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
Inspect auto tension drive belt and replace if required.					X

<b>Kilometers (Miles)</b>	<b>125 000 (78,000)</b>	<b>130 000 (81,000)</b>	<b>134 000 (84,000)</b>	<b>139 000 (87,000)</b>	<b>144 000 (90,000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X
Change rear axle fluid.					X
Change front axle fluid (4X4).					X
Inspect brake linings.			X		
<b>Inspect engine air cleaner filter, replace if necessary.</b>					X
<b>Replace spark plugs.</b>					X
<b>Inspect PCV valve, replace as necessary.*</b>					X
Inspect auto tension drive belt and replace if required.					X
Drain and refill automatic transmission fluid, change filter (3.7L only).					X
Drain and refill automatic transmission fluid and change main sump and cooler return filter (if equipped) (4.7L/5.7L only).					X

<b>Kilometers (Miles)</b>	<b>149 000 (93,000)</b>	<b>154 000 (96,000)</b>	<b>158 000 (99,000)</b>	<b>160 000 (100,000)</b>	<b>163 000 (102,000)</b>
Change engine oil and engine oil filter.	X	X	X		X
Flush and replace engine coolant.				X	
Inspect brake linings.		X			

<b>Kilometers (Miles)</b>	<b>168 000 (105,000)</b>	<b>173 000 (108,000)</b>	<b>178 000 (111,000)</b>	<b>182 000 (114,000)</b>	<b>187 000 (117,000)</b>	<b>192 000 (120,000)</b>
Change engine oil and engine oil filter.	X	X	X	X	X	X
Change rear axle fluid.	X					X
Change front axle fluid (4X4).	X					X
Inspect brake linings.		X				X
<b>Inspect engine air cleaner filter, replace if necessary.</b>	X					X
<b>Replace spark plugs.</b>						X
<b>Replace ignition cables.</b>						X
<b>Inspect PCV valve, replace as necessary.*</b>						X

Kilometers (Miles)	168 000 (105,000)	173 000 (108,000)	178 000 (111,000)	182 000 (114,000)	187 000 (117,000)	192 000 (120,000)
Inspect auto tension drive belt and replace if required.	X					X
Drain and refill transfer case fluid (4X4).						X
Drain and refill automatic transmission fluid and change filter (3.7L).						X
Drain and refill automatic transmission fluid and change main sump filter (4.7L/5.7L only).						X

\* This maintenance is recommended by the manufacture to the owner but is not required to maintain the emissions warranty.

‡ This maintenance is not required if previously replaced.

Inspection and service should also be performed anytime a malfunction is observed or suspected.

**WARNING: You can be badly injured working on or around a motor vehicle. Do only that service work for which you have the knowledge and the right equipment. If you have any doubt about your ability to perform a service job, take your vehicle to a competent mechanic.**

## HOISTING

### STANDARD PROCEDURE

### HOISTING AND JACKING

**WARNING: THE HOISTING AND JACK LIFTING POINTS PROVIDED ARE FOR A COMPLETE VEHICLE. WHEN A CHASSIS OR DRIVETRAIN COMPONENT IS REMOVED FROM A VEHICLE, THE CENTER OF GRAVITY IS ALTERED MAKING SOME HOISTING CONDITIONS UNSTABLE. PROPERLY SUPPORT OR SECURE VEHICLE TO HOISTING DEVICE WHEN THESE CONDITIONS EXIST.**